## **MicroSD Card Formatting Instructions**

For all microSD cards larger than 32 GB, formatting to the FAT32 file system is required to ensure compatibility with the 2WIN.

Please follow the steps below:

- 1. Download the FAT32 formatter application from our website.
- 2. Open the application and select the correct drive corresponding to your microSD card.
- 3. Leave the "Allocation Unit Size" setting at its default value.
- 4. Ensure the "Quick Format" option is selected.
- 5. Click "Start" to begin formatting.

**IMPORTANT**: Do **not** format the C drive!

